


Includes:

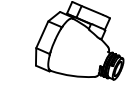

High Flow Spigot



Barrel Seal



Spigot Adapter



PTFE Sealing Tape

Required:




1 Barrel/Tank



1 $\frac{3}{16}$ Spade Bit




Pliers

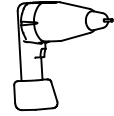

Power Drill


Use the Spigot Kit to attach a high flow spigot to any barrel or tank. Use to attach garden hose, soaker hose (small hole type, not porous), drip irrigation or fill a bucket. For questions or help visit www.RainReserve.com or call 1-417-429-1356

1. Wrap PTFE sealing tape around threaded ends of Tubing Adapter. 2 to 3 layers thick.

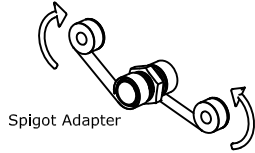

Spigot Adapter

3. Insert Barrel Seal into hole first. Then screw Spigot Adapter into Barrel Seal, then screw High Flow Spigot onto Spigot Adapter using your **hand** to tighten as much as possible. Use pliers to grip Barrel Seal Ear to resist rotation.

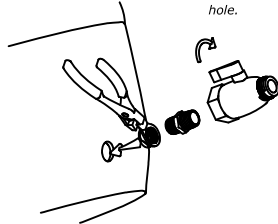


TIP: Use soapy water as a lubricant or warm with body heat to assist the Barrel Seal into the hole.



Safety Warning

Power tools can cause serious damage to property, injury and death. Persons operating drill must have sufficient experience.


2. Drill hole in barrel as shown. Hold drill firmly and slowly with both hands press straight in.

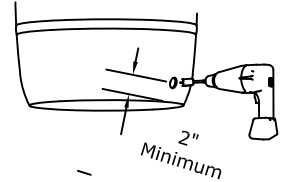

2" Minimum

See Also: Use these other kits to to complete your system

Kit Name	Description	Part Number
Rain Diverter	Connect to downspout to collect rain water and fix overflow, debris and mosquito problems.	2012315
Connector Kit	Reusable attachment and sealing fittings to connect tubing to any tank easily.	2012312
Spigot Kit	Includes High Flow Spigot with garden hose threads and self sealing fittings	2212314
Spade Bit	Drill 1 $\frac{3}{16}$ " hole for a leakless fit for Barrel Seal. Required for Connector Kit and Barrel Spigot Kit. (odd size)	2012127

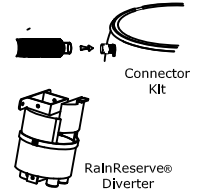

Connector Kit

RainReserve® Diverter



Go to http://www.rainreserve.com/RainReserve_manual.pdf for full system installaion guide.
www.RainReserve.com

Doc#2012210-A
 MADE IN USA
 Page 1